

manicare®

Sonic Mini™



Rechargeable Facial Cleansing Brush

Instruction Manual

Please read the manual before use
and keep the instruction brochure
in a safe place for future reference.

PRODUCT INTRODUCTION

Technical Parameters

Implementation of the standard:
GB4706.1-2005 GB4706.15-2008.

Rated voltage: 220V~

Rated frequency: 50Hz.

Charger output voltage: DC5V.

Charger output current: 1.0A.

Water Resistant: IPx4 for primary unit
(Note: the charging cable is not waterproof).


Battery: built-in rechargeable battery
(polymer lithium battery).

Power supply: USB power supply.

2 Modes: high and low speed.

Each pack includes: one device, one
USB charging cable, one sensitive brush
head & one brush head cover.

Power Key/
Mode Switch

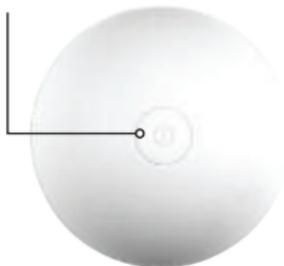

Sensitive
Brush Head



Brush
Cover



USB Charging
Cable




HOW TO USE


On/Off

- * Press power button once for low speed. Dimmed indicator light will come on.
- * Press the power button once again for high speed. Indicator light will become brighter.
- * Power off by pressing the power button for a third time. Indicator light will go out.
- * When the device needs to be charged, the indicator light will flash as a reminder.
- * The **Manicare® Sonic Mini™** will time out after 5 minutes automatically.


Short press
power button

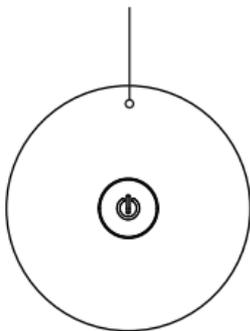

Dimmer indicator light,
low speed mode

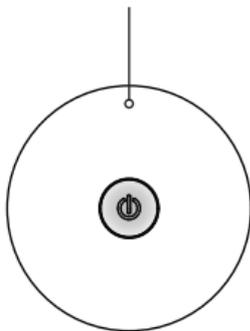

Brighter indicator light
high speed mode

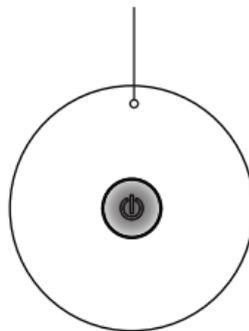

HOW TO CHARGE

Technical Parameters

When charging for the first time, or after an extended period of non-use, charge for 1.5 - 2 hours prior.


1. Pull off the brush attachment and insert cable into charging port. Connect the USB to appropriate power supply.
2. During the charging process, the indicator light will continue to flash intermittently. The indicator light will remain on when the device is fully charged.

Before charging, please check the USB isn't tangled to avoid failure.

The device will not work during the charging process.


If the device is functioning abnormally, turn off immediately and discontinue use.

Avoid long periods of non-use to protect battery.

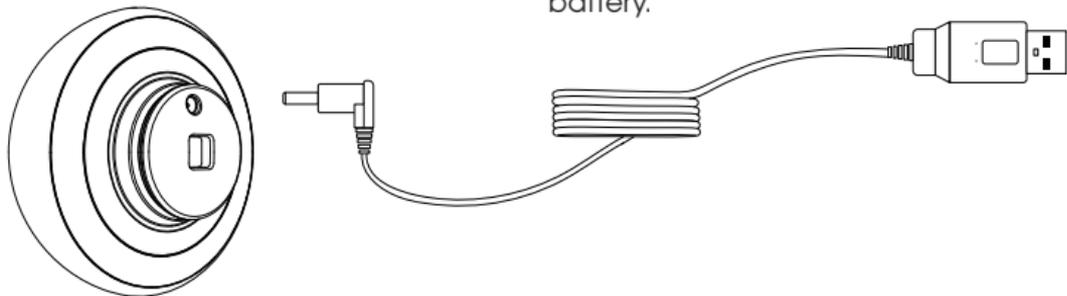

BRUSH HEAD INSTALLATION / CLEANING

- * **Installation:**
Align the brush attachment to the base of the device, click in to tighten it.
- * **Disassembling:**
Grasp the brush attachment directly to pull out. Avoid pulling/pushing it from an angle.
- * It is recommended to remove the brush attachment every week, wash it with warm soapy water and leave it to dry naturally before using it again.
- * It is recommended to replace the cleansing brush every 3 months.

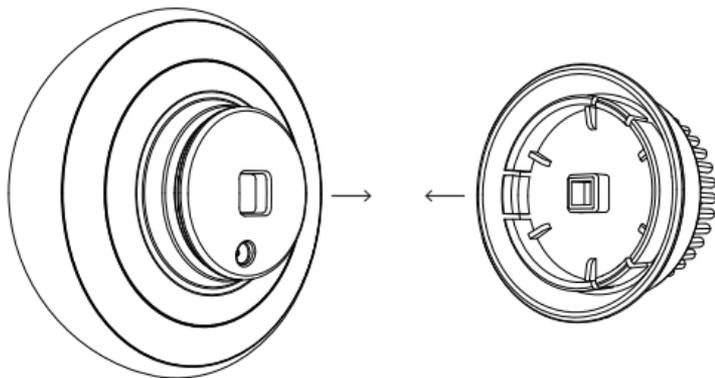

BRUSH HEAD INSTALLATION / CLEANING

Use water to clean the device and brush heads (but not the charging cable) regularly, the water temperature should not exceed 50°C;

Do not use alcohol, scrub cleansers, or any abrasive substances to clean the device and brush heads.

After cleaning, let the accessories naturally dry;

For health reasons, it is not advisable to share the product with others;

Follow the instructions in the instruction manual on how to use the cleanser.

Do not use unauthorized parts from other manufacturers.

HOW TO GET THE BEST OUT OF MANICARE® SONIC MINI™ FACIAL CLEANSING BRUSH

Apply cleanser directly to moistened skin with lukewarm water or a damp brush head.

Forehead: Move the brush head from the center of the forehead along the eyebrow in slow moving circular motion for 20 seconds;

Cheeks: Clean for 10 seconds in a gentle circular upward movement to achieve the best effect.

Nose & chin: Move from the inside to the outside in a gentle circular motion for 10 seconds.

Finally rinse off any residue with water, follow-up with your favourite skin care routine.

After cleansing, clean the brush and dry the unit in a dry and ventilated location.



PLEASE NOTE:

Do not use **Manicare® Sonic Mini™** to remove eye make-up.

Avoid areas around the eyes as the skin is more delicate.

Use in a gentle slow circular motion on skin.

Do not use for long periods of time. Recommended full face cleansing time is approximately 1 minute.

If you experience swelling and/or discomfort, please immediately stop using the device and consult a medical professional.

HOW TO GET THE BEST OUT OF MANICARE® SONIC MINI™ FACIAL CLEANSING BRUSH WITH MASSAGE ROUTINE

Massage attachment for Manicare® Sonic Mini™ is also available for purchase if desired.

1. Before you start, swap the brush head with the massage attachment. It can be used with skin care products, or used alone. Massage is best performed with slow gentle circular motion with light pressure.


2. Cheeks: starting from cheeks, massage each side for 30 seconds. Using the same wide circular strokes from the bottom of the chin; massage left cheek clockwise, right cheek counterclockwise in gentle circular movements, in order to achieve the best lifting effect.

3. Neck/Chin: 30 seconds each, move in circular and upward movement to massage;

4. Forehead: 30 seconds, from the eyebrows to the temple massage;

5. After using the massage head, please clean and dry.

Recommended massage time: 2 minutes.

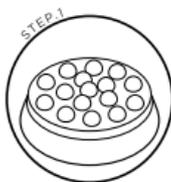

SAFETY PRECAUTIONS

If you are susceptible to one or more of the conditions below, please seek advice from a medical professional prior to use.

- Skin allergies
- Sunburn
- Opened wounds
- Skin lesions
- Itchy skin or skin prone to irritation or discomfort
- Severe acne
- Recently had your face treated or subjected to chemical stripping, microdermabrasion or cosmetic surgery

AUS / NZ ONLY GUARANTEE AGAINST DEFECTS

For AUS:

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For NZ:

The Consumer Guarantees Act 1993 applies.

For AUS and NZ:

We give 1 year guarantee against defects from date of purchase. To claim, send the product with all contents (device, refill brush head, charger cable & brush cover) and proof of purchase to us at your expense. We will repair, replace or refund (our choice) defective products without further cost. It would also help us if you can return the original box so that we can identify the batch of the product.

For purchases made in Australia and New Zealand, send products to McPherson's Consumer Products Pty Limited at the Australian address shown on the last page of this Manual.

The benefits of this Guarantee as to Defects are in addition to other rights and remedies you have under law.

MANICARE® SONIC MINI™ FACIAL CLEANSING BRUSH 30-DAY CHALLENGE

Try any **Manicare® Sonic Mini™** Facial Cleansing Brush for 30 days from date of purchase. If you are not satisfied with this product, contact us within 45 days of purchase for a refund of the purchase price (postage not included). You must return the product with all contents (device, brush head, charger cable & brush cover), together with the original receipt showing this product was purchased in Australia or New Zealand within the last 45 days.

For further details on how to return your product, please contact McPherson's Consumer Information Service on 1800 651 146 (Aust) or 0800 990 003 (NZ), or visit manicare.com.au/guarantee.



manicare® Sonic Mini™



M C P H E R S O N ' S

EST. 1860

Aus: 105 Vanessa Street, Kingsgrove, NSW 2208.

NZ: 30 Highbrook Drive, East Tamaki, Auckland 2013.

S'pore/Asia: 20 Toh Guan Rd #03-00 CJ Korea Express
Building, Singapore 608839.

Freecall Australia: 1800 651 146

Freecall NZ: 0800 990 003

Manicare is a registered trademark.

Made in China.

For expert beauty tips & tricks visit:

www.manicare.com.au

